

Installation Instructions


Install and compact aggregate base. Consult your paver supplier for proper base width and depth for the specific paver application.

Determine proper edge positioning and install NovaEdge™ directly on top of compacted aggregate base prior to screeding sand and setting pavers.

NovaEdge™ can be installed with anchoring tabs for spikes/stakes underneath or adjacent to the edge of the pavers. Diagram 1 (below, left) illustrates an installation with the anchoring tabs underneath the pavers. Diagram 2 (below, right) illustrates an installation with the anchoring tabs adjacent to the edge of the pavers.

Secure NovaEdge™ by driving custom landscape stakes or 3/8" diameter spikes through anchoring tabs, directly into compacted aggregate base. Recommended spike spacing (maximum):

- Flexible - every 12-18"
- Rigid - every 18-24"

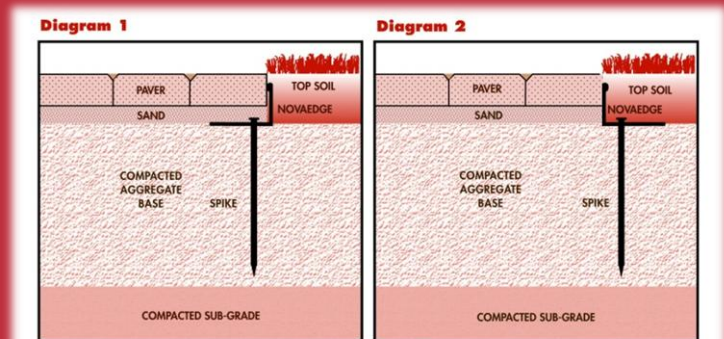

After installation and compaction of pavers, back fill perimeter with topsoil. Install seed, sod or ground cover, as specified.

For more detailed instructions, check out *Paver Installation Guide DVD*, a 53-minute step-by-step guide to installing interlocking concrete pavers for contractors and do-it-yourselfers. Contact Dimex for more details.